

SR Scales®

"The Measure of Excellence"


Mobile Platform Scale
Model **SR®V714**

This app enabled mobile platform scale makes gathering weight for large hoofstock or pachyderms easy and safe for both the animal, and the keeper.

The **SR®V714** is constructed from durable stainless and aluminum tube with a high density anti-slip plastic surface. The extra large weighing platform consist of two transducer tubes and 3 top plates which can be assembled in less than two minutes without tools.

The **SR®V714** is constructed from hermetically sealed load cells allowing for complete wash down of scale for cleaning.

Whatever your weighing needs may be, **SR Scales®** is "The measure of Excellence."

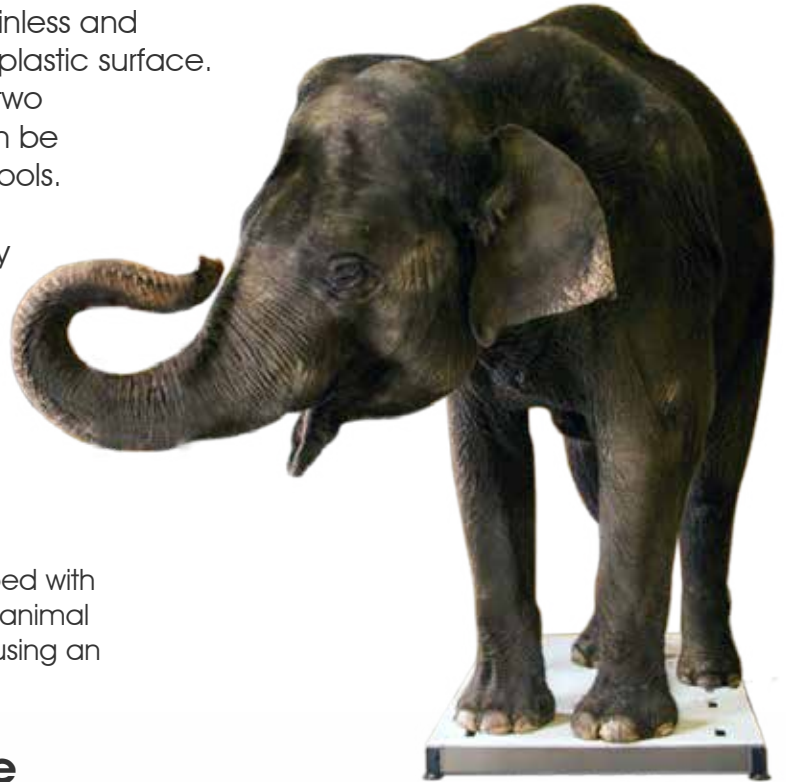

Wireless - The scale electronics are equipped with bluetooth wireless communication enabling the animal keeper to operate the scale at a safe distance using an android tablet or phone.

Extra Large Weighing Surface

The scales large 48" x 96" anti-skid surface makes it ideal for gathering weight on large animals.

Capacity - 15,000Lbs. or 6,800Kgs.

Portable - The unique 5 piece design makes the scale lightweight allowing for portability between exhibits as well as being keeper friendly.

Power - Six D-cell batteries provide up to 1,200 weigh cycles.



SR®V714 Mobile Platform Scale
shown with tablet for readout


SYSTEM SPECIFICATIONS

Max Weight	15,000lb/ 6800kg
Display Resolution	5lb/2kg
Display Units	Pounds or Kilograms
Five Buttons	Zero, Weight, Held Wt, Pounds, Kilograms
Portability	Scale disassembles for easy transport
Scale Weight	
- Top Panels	95lbs./ pc. (3 pcs.)
- Transducers	80lbs/ pc. (2 pcs.)
Power	Six "D" Cell Batteries
Held Wt.	Highest stable weight is automatically stored in MEMORY. Press Held Wt to RECALL last stored weight.
Auto Power Down	Approximately ten (10) Minutes of Non-Use
Warranty	Two (2) Years

Mobile Platform Scale

Model **SR**®V714

DIMENSIONS in (cm)

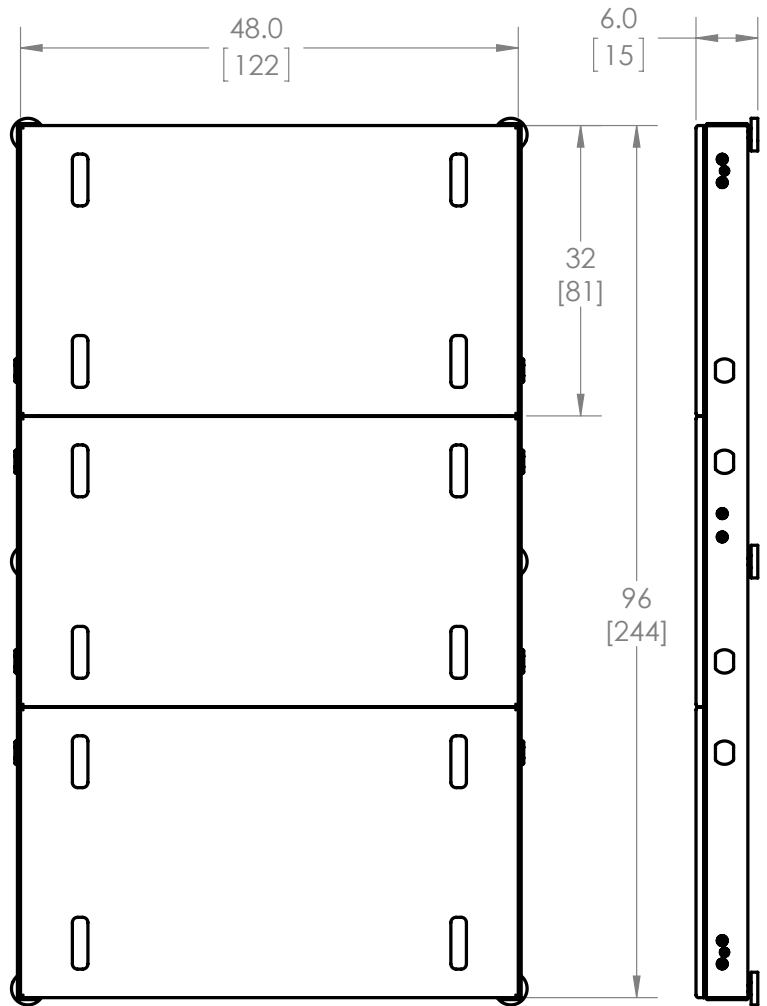

PACKAGING

