

SR Scales®

“The Measure of Excellence”

This app-enabled mobile platform scale makes gathering weight for large hoofstock both easy and safe for the animal and the keeper.

The SRV715W is constructed from light-weight yet durable aluminum with a high density anti-slip plastic surface. The extra large weighing platform consist of a transducer frame and a separate surface plate which can be assembled in less than one minute without tools.

The SRV715W is constructed using hermetically sealed load cells allowing for easy and quick wash down of scale after use.

Whatever your weighing needs may be, SR Scales® is “The measure of Excellence.”



Wireless - The scale’s electronics are equipped with Bluetooth wireless communication enabling the animal keeper to operate the scale at a safe distance using an android tablet or smart phone.

Extra Large Weighing Surface -

The scales large 48” x 72” anti-skid surface makes it ideal for gathering weights on large animals.



SRV715W mobile platform display tablet

Capacity - 4,000 Lbs. or 1,820 Kgs.

Portable - The unique 2 piece design makes the scale lightweight allowing for portablility between exhibits as well as being keeper friendly.

Power - Six “AA” batteries provide up to 800 weigh cycles.




SYSTEM SPECIFICATIONS

Max Weight	4,000 Lbs. / 1820 Kgs
Display Resolution	1 Lb. / .5 kg
Display Units	Pounds or Kilograms
Five Buttons	Zero, Weight, Held Wt, Pounds, Kilograms
Portability	Scale disassembles for easy transport and storage.
Scale Weight	
- Top Panel	80 Lbs. / pc. (1 pc.)
- Transducer	80 Lbs. / pc. (1 pc.)
Power	Six "AA" Cell Batteries
Held Wt.	Highest stable weight is automatically stored in MEMORY. Press Held Wt to RECALL last stored weight.
Auto Power Down	Approximately ten (10) Minutes of Non-Use
Warranty	Two (2) Years

Mobile Platform Scale Model SRV715W

DIMENSIONS in (cm)

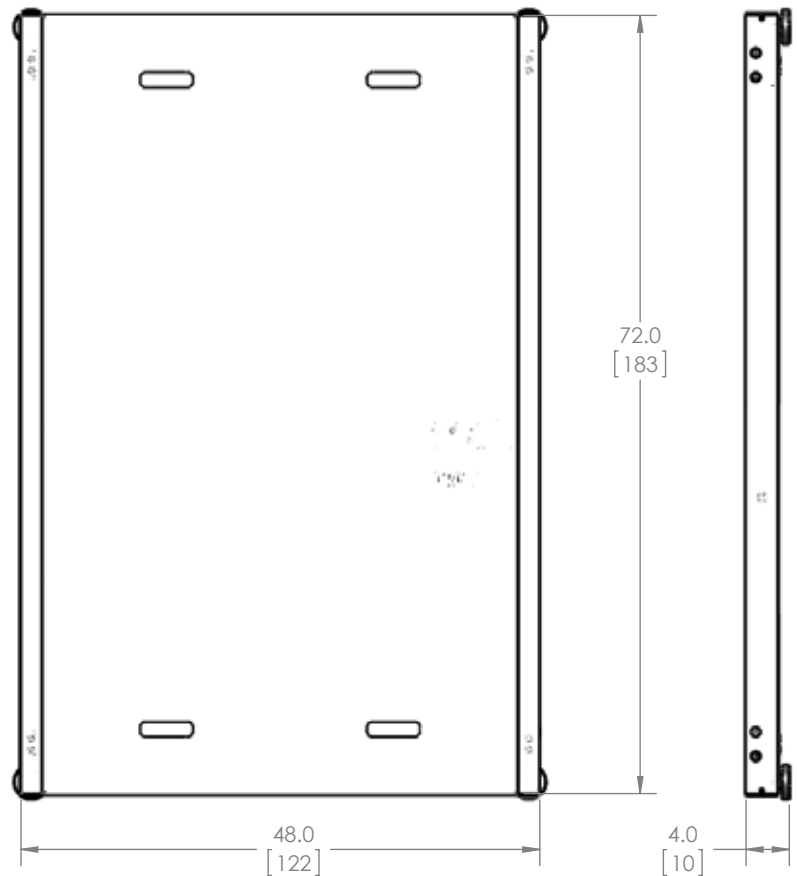

PACKAGING

